


Receiver ct24

The ct24 receiver is available in 3 versions:
ct24.9-ASO (9 relays), ct24.17 (17 relays) and ct24.32 (32 relays)
Power supply: 40..264VAC or 12..24VDC

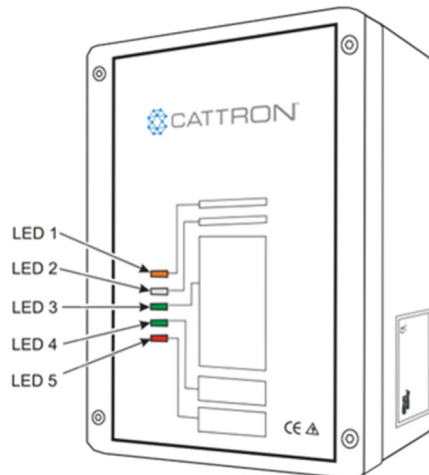

Status displays

- LED1:** Power On
- LED2:** RF scan (Option)
- LED3:** RF Reception
KO relays active
- LED3:** RF Reception
K0 relays inactive
- LED3:** RF Reception
Wrong transmitter
- LED4:** Movement command active
- LED5:** Error indication
LED flashing / error code

Error messages

- 2x Flashing: Transkey not recognised
- 3x Flashing: Transkey incorrectly configured
- 4x Flashing: Error in undervoltage test
when switching on
- 5x Flashing: Main relay error (K0)
- 6x Flashing: Error when reading back the relays
- 7x Flashing: Incorrect RF module or RF module
Incorrectly configured or defective
- 8x Flashing: General system error
- 9x Flashing: Undervoltage of the
Supply voltage detected
- 10x Flashing: Hardware error

Complete operating instructions receiver ct24



<https://www.atb-systeme.ch/Cattron/Empfanger-CT24.htm>

General Agency Switzerland:



ATB Systeme AG
Guglern 5
6018 Buttisholz

Tel: +41 41 544 66 66
E-Mail: info@atb-systeme.ch
Web: www.atb-systeme.ch